


## 1. Assembly Drawing (CD-5/9(HT))

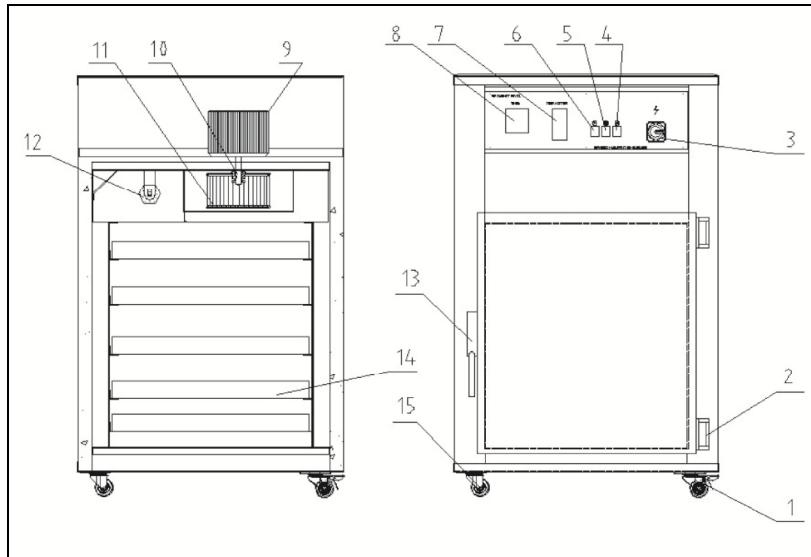

Remarks: Please refer to material list 2 for specific explanation of the Arabic numbers in parts drawing.


## 2. Parts List (CD-5/9(HT))

No.	Name	Part No.		
		CD-5-(HT)(50Hz/60Hz)	CD-9(50Hz/60Hz)	CD-9-HT(50Hz/60Hz)
1	3" Brake castor	YW03000300000	YW03000300000	YW03000300000
2	Oven Door Back Button	BW09000200100	BW09000200100	BW09000200100
3	Main power switch	YE10021160000	YE10021160000	YE10021160000
4	Motor switch	YE10210400000	YE10210400000	YE10210400000
5	Electric heating switch	YE10210400000	YE10210400000	YE10210400000
6	Timer switch	YE10220600000	YE10220600000	YE10220600000
7	Temperature controller	YE80002200900	YE80002200900	YE80002200900
8	Timer	YE80485200100	YE80485200100	YE80485200100
9	Motor	50Hz:YM10271100000 60Hz:YM10271200000	50Hz:YM10271100000 60Hz:YM10271200000	YM10271200000
10	Motor longer shaft	BH11053800010	BH11053800010	BH11053800010
11	Motor blade	50Hz:YW09007500100 60Hz:YW09000701100	50Hz:YW09007500100 60Hz:YW09000701100	50Hz:YW09945140000 60Hz:YW09000701100
12	Heating wire*	BH70050400050	BH70094500050	BH70094500050
13	Door straight lock	YW00000000000	YW00000000000	YW00000000000
14	Pallet	-	-	-
15	3" Movable castors	YW03000300200	YW03000300200	YW03000300200

\* means possible broken parts. \*\* means easy broken part. and spare backup is suggested.

Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.

### 3. Assembly Drawing (CD-20/20L(HT))

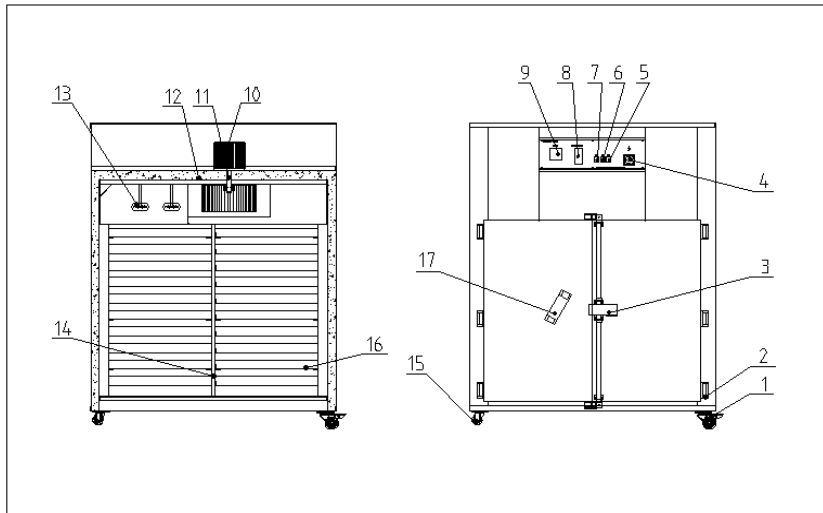

Remarks: Please refer to material list 4 for specific explanation of the Arabic numbers in parts drawing.

### 4. Parts List (CD-20/20L(HT))

No.	Name	Part No.	
		CD-20-(HT)(50Hz/60Hz)	CD-20L-(HT)
1	3" Brake castor	YW03000300000	YW03000300000
2	Oven Door Back Button	BW09000200100	BW09000200100
3	Mechanical door handle	-	-
4	Main power switch	YE10323200000	YE10323200000
5	Motor switch	YE10210400000	YE10210400000
6	Electric heating switch	YE10210400000	YE10210400000
7	Timer switch	YE10210600000	YE10210600000
8	Temperature controller	YE80002200900	YE80002200900
9	Timer	YE80485200100	YE80485200100
10	Motor	YM10290400000	YM10290400000
11	Motor longer shaft	BH11203600010	BH11203600010
12	Motor blade	50Hz:YW09001200400	YW09001200400
		60Hz:YW09105200100	
13	Heating wire*	BH70094500050	BH70204500150
14	Intermediate support frame	-	-
15	3" Movable castors	YW03000300200	YW03000300200
16	Pallet	-	-
17	Oven Handle	YW09000300200	YW09000300200

\* means possible broken parts. \*\* means easy broken part. and spare backup is suggested.

Please confirm the version of manual before placing the purchase order to guarantee that the item number of the spare part is in accordance with the real object.